





Programmable Constant Power LED Driver

- Emergency LED Driver
- Input Voltage: 240Vac ± 20%
- Output Voltage Range: 12-55V==
- Output Current Range: 73-333mA
- Emergency Power: 4W
- Test Switch Indicator: Red Light
- IP20

General Specifications		
Input Voltage / Frequency	120-277V~, 50/60Hz	
Rated Input Voltage	240Vac ±20%, 50/60Hz	
Input Current	100mA Max	
Input Power	3W	
Standby Power	<0.85W	
Input Power Pass-Through Rating (White/Black Lead)	1A	
Max Output Rating (Red Lead)	2A, 55V Max	
Driver Type	Constant Power	
Current Rated	333mA @12V, 73mA @55V	
Output Voltage Range	12-55V 	
Output Power	4W	
Output Class	LED Class2	
Number of Output Channels	1 Channel	
Test Switch Part Number	FHSCP-TST-WC	
Test Switch Indicator	Red Light	
Test Switch Remote Mounting Distance	65.6' (20m) Max.	
Battery ON / OFF	18AWG Wire + Connector	
Wire Type	Input: 18AWG, Output: 18 AWG, Test Switch: 22AWG	
Dry Location	Dry Location	
Input Surge Protection	Line-Neutral 1kV, Line & Neutral-Ground 2kV	
Emergency Mode Protections	Battery Over Voltage Protection	
5 ,	Battery Under Voltage Protection	
	Output Open Circuit Protection	
	Output Short Circuit Protection	
RFI / EMI	FCC Part 15 ClassA	
Ambient Operating Temperature Range	5°C To 55°C (41°F To 131°F)	
Sound Rating	A	
Battery Type	LiFePO4	
Battery Voltage	6.4V	
Battery Capacity	2Ah Max	
Battery Charge Current	165mA	
Battery Recharge Time	12 Hours	
Battery Discharge Time	Min 90 Minutes	
IP Rating	IP20	
Service Life	50,000 hours	
Warranty	5 years	


Fulham extends a limited warranty only to the original purchaser or to the first user for a period of 5 years @ Tc Max from the date of manufacture when properly installed and operated under normal conditions of use. For complete terms and conditions, please reference the Fulham Product Catalog (www.fulham.com). Due to a program of continuous improvement, Fulham reserves the right to make modifications or variations in design or construction to the equipment described. © Fulham Company Limited, All Rights Reserved.









Mechanical Data

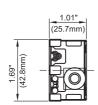

Overall Dimensions				
Length	5.34" (135.7mm)			
Width	1.69" (42.8mm)			
Height	1.01" (25.7mm)			
Mounting	5.02" (127.4mm)			

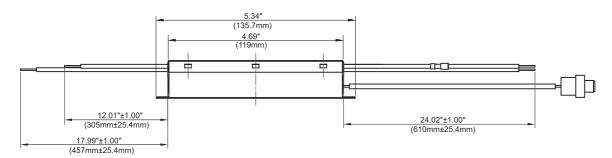

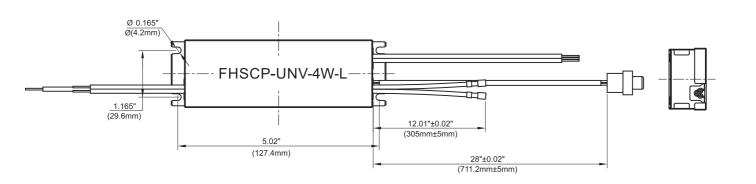

Tolerance = \pm [0.5mm]

Fulham extends a limited warranty only to the original purchaser or to the first user for a period of <u>5 years @ Tc Max</u> from the date of manufacture when properly installed and operated under normal conditions of use. For complete terms and conditions, please reference the Fulham Product Catalog (www.fulham.com). Due to a program of continuous improvement, Fulham reserves the right to make modifications or variations in design or construction to the equipment described. © Fulham Company Limited, All Rights Reserved.








Accessories


Test Switch: FHSCP-TST-WC

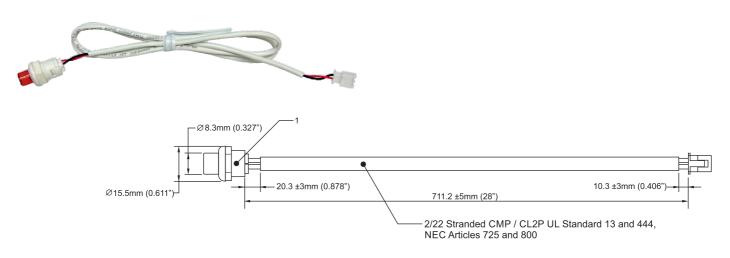

Wall Plate: FHSWLPWH (not included)




Wall plate and screw color: white with black lettering

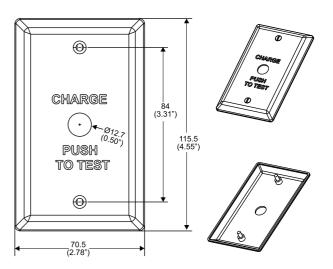

1."Charge push to Test"plate
2. (2) 6-32 x ½"LG mounting screws

Fulham extends a limited warranty only to the original purchaser or to the first user for a period of 5 years @ Tc Max from the date of manufacture when properly installed and operated under normal conditions of use. For complete terms and conditions, please reference the Fulham Product Catalog (www.fulham.com). Due to a program of continuous improvement, Fulham reserves the right to make modifications or variations in design or construction to the equipment described. © Fulham Company Limited, All Rights Reserved.

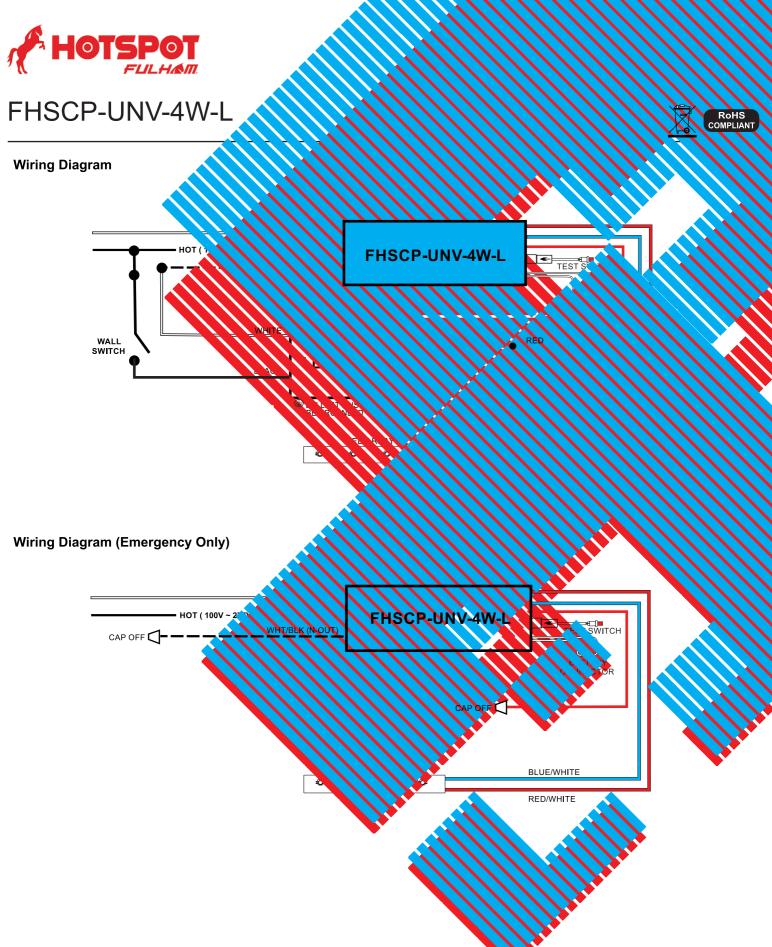

Fulham extends a limited warranty only to the original purchaser or to the first user for a period of 5 years @ Te.Max from the date of manufacture when properly installed and operated under normal conditions of use. For complete terms and conditions, please reference the Fulham Product Catalog (www.fulham.com). Due to a program of continuous improvement, Fulham reserves the right to make modifications or variations in design or construction to the equipment described. © Fulham Company Limited, All Rights Reserved.







Test Switch Indicator Status:

LED Indicators Status	EM Driver Status/Mode		
Solid Red	Normal working in AC mode.		
 Slow Flashing Red, 4s on/1s off 	Battery not detected mode.		
● Flashing Red, 1s on/1s off	Battery Failure Detected mode.		
● Flashing Red, 4s on/4 s off	No Load/LED Load Failure mode.		
● Flashing Red, 0.1s on/3s off	Emergency mode.		

Test Switch Operations:

EM Test: Press and hold test button for 1s to enter EM mode for testing in normal AC powered. Press and hold test button for 10s to exit emergency mode.







Guidelines

Grounding

• Driver must be grounded by means of the Driver case.

LED load

• Fulham's Hotspot Constant Power Emergency LED drivers are designed to drive passive LEDs, COB's and LED assemblies. Proper function is not guaranteed when (LED) loads with active components are used.

Mounting / Cooling

• Above an output power of 4W, the driver needs to be mounted on a heat conductive surface of at least 40cm². Always test if the surface is sufficient enough before installing the driver.

Short-circuit protection

• In case of a short circuit the LED driver switches to protection mode. After the removal of the short-circuit the LED driver will Latch, need restart AC Power.

No-load Operation

• In no-load operation the output voltage will not exceed the specified open circuit output voltage.

Hot Swapping

This driver does not support hot swapping of the LEDs

Battery Maintenance

• In order to maintain proper operation and warranty coverage, the battery must be recharged once per year prior to installation.

Warranty

Reference Fulham's limited Warranty: https://cdn.fulham.com/PDFs/Limited-Warranty.pdf

Fulham extends a limited warranty only to the original purchaser or to the first user for a period of <u>5 years @ Tc Max</u> from the date of manufacture when properly installed and operated under normal conditions of use. For complete terms and conditions, please reference the Fulham Product Catalog (www.fulham.com). Due to a program of continuous improvement, Fulham reserves the right to make modifications or variations in design or construction to the equipment described. © Fulham Company Limited, All Rights Reserved.







Part Number Matrix



LED Driver

FHS = FireHorse HotSpot Driver



Driver Type

CP = Constant Power

UNV

Input Voltage

UNV = 120V-277V

4W

Power

4W = 4 Watts

<u>L</u>

Case Type

L = Long Case


Product Image: LED Driver

FHSCP-UNV-4W-L



Packaging

Master Carton

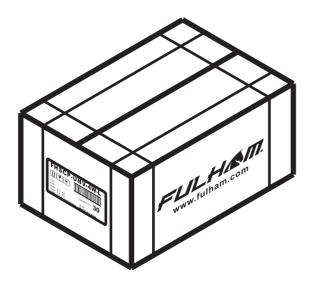

OUTER DIMENSION					
L	W		V	Н	
15.52"(394m	ım)	10.79"(274mm)		8.268" (210mm)	
Net Weight	Gross Weight		Ql	JANTITY	
18.52lbs. (8.4kg.)	20.72lbs. (9.4kg)		30pcs.		

Fulham extends a limited warranty only to the original purchaser or to the first user for a period of <u>5 years @ Tc Max</u> from the date of manufacture when properly installed and operated under normal conditions of use. For complete terms and conditions, please reference the Fulham Product Catalog (www.fulham.com). Due to a program of continuous improvement, Fulham reserves the right to make modifications or variations in design or construction to the equipment described. © Fulham Company Limited, All Rights Reserved.